





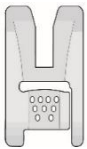

**Mystical Whimsy Quilt – Class 2**








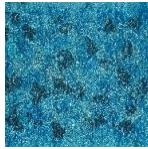

**7/9 Hole Cord Foot for IDT™ System**

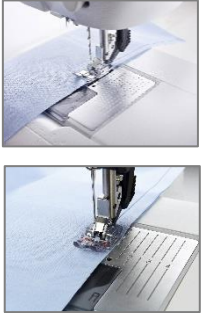






Wonderful decorative embellishments are easy with the 7/9 Hole Cord Foot. You can sew up to nine different lengths of embroidery floss, pearl cotton or high sheen threads in place with your choice of a decorative or utility stitch.



**Supplies:**

Fabric #2		2(3½" x 25½") Top & Bottom Rows piecing 2(2" x 25½") Top & Bottom Rows Piecing
Fabric #3		2(2½" x 25½") Top & Bottom Rows Piecing
Fabric #4a & 4B Confetti Cloth from Class 1		4(1½" x 25½") Top & Bottom Rows
Fabric #9* Brocade Fashion Fabric		2(11" x 27") Top & Bottom Rows Piecing 1(8" x 21") Large Circle Piecing
7/9 Hole Cord Foot for IDT™ System	 	Part #820608096

<p>¼ Inch Quilting Foot for IDT™ System</p> <p>or</p> <p>Clear ¼ Inch Quilting Foot for IDT™ System</p>		<p>Part #820926096</p> <p>Part #820883096</p>
<p>Extension Table</p>		<p>Part number will be dependent on PFAFF® sewing machine model</p>
<p>PFAFF® Whisper Web Mesh Fuse-on 12" x 10 yards</p>		<p>Part #821419096</p> <p>Cut 2(11" x 27") &amp; 1(8" x 21")</p>
<p>PFAFF® Topstitch Needle Size 90/14, 5 pack</p>		<p>Part #821196096</p>
<p>PFAFF® Universal Needle Size 80/12, 5 pack</p>		<p>Part #821194096</p>
<p>50wt Cotton Sewing Thread</p>		
<p>Robison-Anton Poly Filament Bobbin Thread</p>		<p>Part #140000905</p>
<p>Robison-Anton Metallic Embroidery Thread</p>		<p>Part number based on color</p>
<p>PFAFF® 4"/10.2cm Micro Tip Straight Blade Scissor</p>		<p>Part #821286996</p>

PFAFF® 6"/15.2cm Safety Stiletto		Part #821294996
Candlelight Metallic Yarn or Pearl Crown Rayon		
Floss Threader		
Chalk Marker		
SINGER® Steam Iron		Part number dependent on iron model.
Rotary Cutter, Mat, 6" x 24" Ruler		
Straight Pins		
Other Supplies <ul style="list-style-type: none"> <li>• Ironing Surface</li> <li>• Pressing Cloth</li> </ul>		

## Grid Stitching for Top and Bottom Rows




### Sewing Machine Preparations

1. Insert a PFAFF® Topstitch Needle Size 90/14 in your PFAFF® sewing machine.
2. Attach the Extension Table, this will give you a larger sewing surface and better support for your project.
3. Thread with Robison-Anton Metallic Embroidery thread on top and Robison-Anton Poly Filament Bobbin thread on the bobbin.

- Cut equal lengths of Candlelight Metallic Yarn or Pearl Crown Rayon.



- Thread the cords through the holes in the foot from the top to the bottom using a floss threader. Thread 9 of the holes if you have a sewing machine with a 9mm stitch width or thread through 7 holes for a 7mm stitch width. Tip: Tie them together in a knot so they don't slip out of the holes.

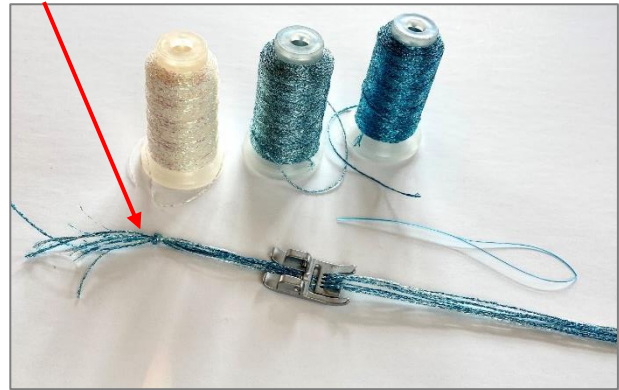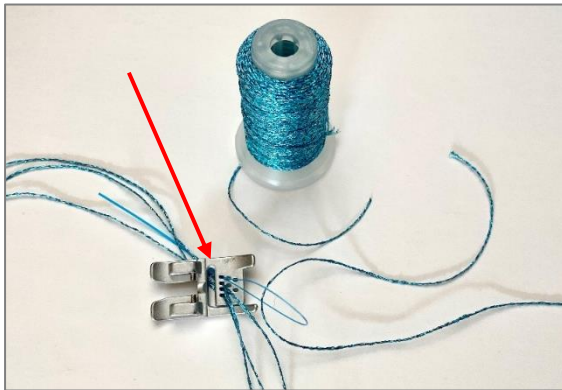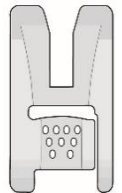

- Attach the 7/9 Hole Cord Foot to your PFAFF® sewing machine.
- Lead the cords under the presser foot and out the back. Leave the thread tails extending about 1½" at the back.
- Select a decorative stitch. Note: Decorative stitches that use forward motion work best (avoid stitches with too much backward motion). If you have a sewing machine that has the Optional Feet Stitches you can use a Three Part Decorative Stitch designed for the Three Hole Yarn Foot, these stitches can also be used with the 7/9 Hole Cord Foot. You can also use the Three-Step Zigzag Stitch, Elastic Stitch or Triple Stretch Stitch. When using these Zigzag stitches and you have threaded 9 holes in the foot increase the stitch width to 9mm.

Three Part Decorative Stitches




Zigzag Stitches







## Fabric Preparation

1. Directions for fusing the PFAFF® Whisper Web Mesh Fuse-on:
  - a. Place the fusible (shinier) side of the stabilizer onto the wrong side of the 2(11" x 27") pieces of Fabric #9.
  - b. Use a pressing cloth apply the stabilizer to the back of the fabric with a SINGER® iron set on the Silk setting without steam.
  - c. Press, hold then lift iron (without sliding) until entire area is fused.
2. On the 2(11" x 27") pieces of fabric, draw with a chalk marker a 45-degree angle on one of the corners.

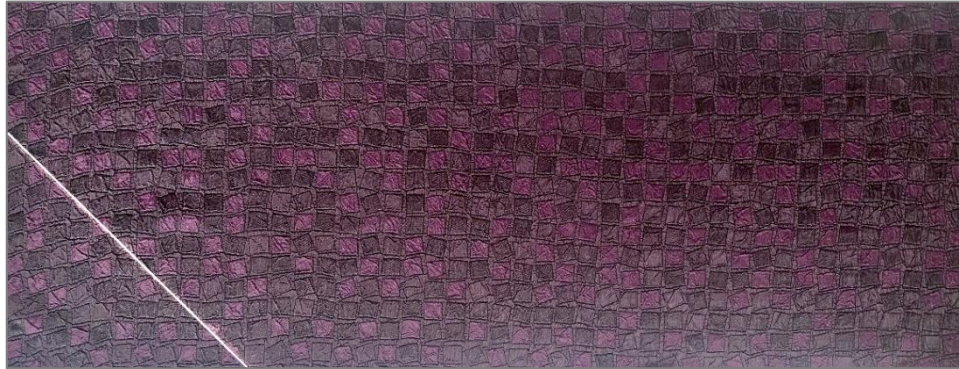

## Sewing Instructions

1. Line up the presser foot along the drawn line. Stitch the cord in place. Sew carefully, not too fast. If your machine has a speed control reduce the sewing speed to easily guide the fabric and cord as you sew.

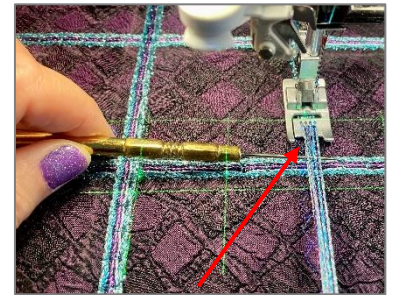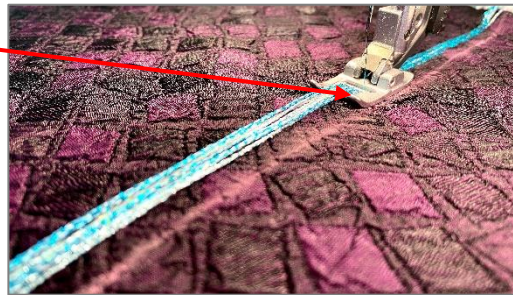

Tip: Use the PFAFF® Safety Stiletto to help separate the cords to keep them from tangling.

2. Measure 1½" or 2" away from the stitching the choice is yours on how spread out you want the lines. Draw the line with the chalk marker. Note: For stitching using the Projector on the *creative icon™ 2* skip to that section of instructions.






3. Line up the presser foot along the drawn line. Stitch the cord in place. Note: be sure to always line up the foot on the same side of the line so that your lines will be equally spaced apart.
4. Continue to add lines until you have 4 lines stitched or your desired amount; you are the designer of this project so you can add more lines if you would like.
5. Draw a line at a right angle to the stitched lines to create a grid. Stitch the cord in place.
6. Continue to add lines until you have 3 lines stitched or your desired amount.




7. Repeat this process for the second 11" x 27" piece.
8. Press the pieces.
9. Trim the pieces down to measure 9½" x 25½".

### **creative icon™ 2 Instructions using the Projector**

1. Use the **Projector** and **Grid** to create lines to follow along. Turn **Projection On**.
2. Set the **Projector Brightness** to full.
3. Turn on the **Stitch Preview** and select a color that will show up on your fabric.
4. Turn on the **Grid**.
5. Set the **Grid Size** to 30 by touching in the center of the **Grid Size** to bring up the number panel and type in the number 30 and touch **OK**.
6. Set the **Grid Color** to a color you can see on your fabric.
7. You will still need to draw the first 45-degree line on your fabric and stitch that line.

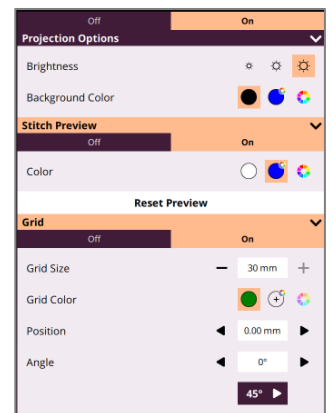


8. Line up the second Grid line along the stitched line and stitch the cord in place.
9. Repeat until you have your desired number of lines of cord stitched.
10. Draw a line at a right angle to the stitched lines to create a grid. Stitch the cord in place.
11. Line up the Grid line with the stitched line and continue to stitch your desired number of lines of cord.
12. Repeat this process for the second 11" x 27" piece.
13. Trim the pieces down to measure 9½" x 25½".

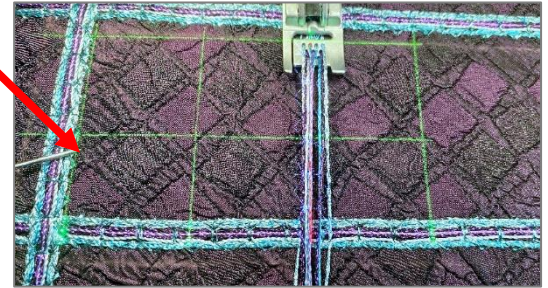

## Top and Bottom Rows (Horizontal Section)

### Sewing Machine Preparations

1. Insert a PFAFF® Universal Needle Size 80/12 in your PFAFF® sewing machine.
2. Thread with 50wt cotton sewing thread on top and on the bobbin.
3. Attach the ¼ Inch Quilting Foot for IDT™ System or Clear ¼ Inch Quilting Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.
4. Select a Straight Stitch.

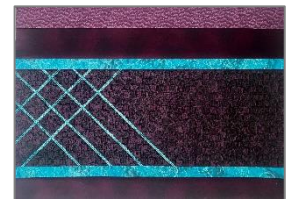

### Sewing Instructions (Make 2)

1. Pin and sew using a ¼" seam allowance the 1½" x 25½" pieces of Confetti Cloth onto the top and bottom of each of the 9½" x 25½" pieces of Fabric #9 with the decorative cording.
2. Press towards Fabric #9.






3. Pin and sew the 3½" x 25½" piece of Fabric #2 to the top of the pieces as illustrated. Press towards Fabric #2.



4. Pin and sew the 2" x 25½" piece of Fabric #2 to the bottom of the pieces as illustrated. Press towards Fabric #2.



5. Pin and sew the 2½" x 25½" piece of Fabric #3 to the top of the pieces as illustrated. Press towards Fabric #3.

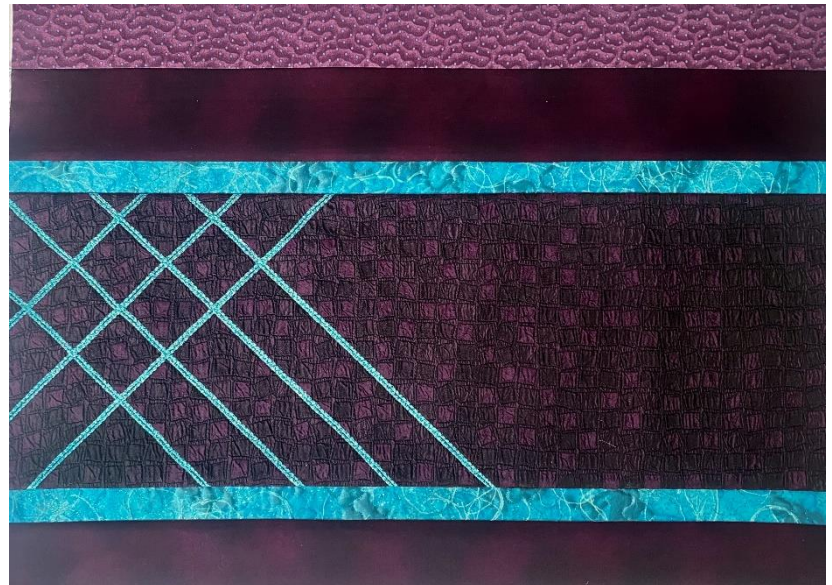


6. You will have 2 pieces that look like this. →





## Random Stitching for Large Circle Strip Piecing

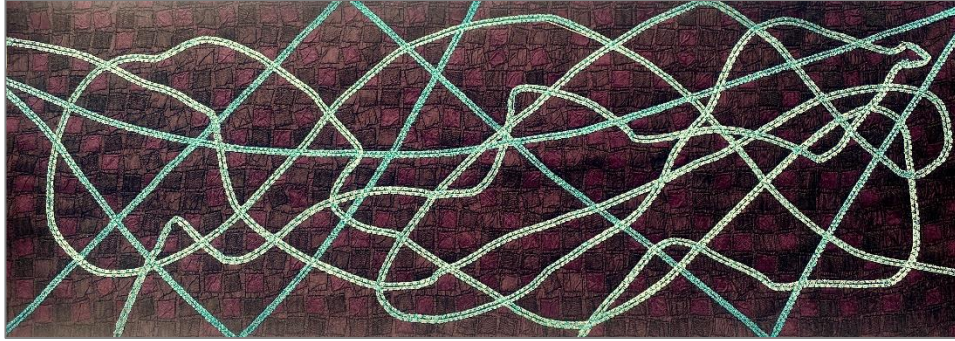

### Fabric Preparation

1. Directions for fusing the PFAFF® Whisper Web Mesh Fuse-on:
  - a. Place the fusible (shinier) side of the stabilizer onto the wrong side of the 8" x 21" piece of Fabric #9.
  - b. Use a pressing cloth apply the stabilizer to the back of the fabric with a SINGER® iron set on the Silk setting without steam.
  - c. Press, hold then lift iron (without sliding) until entire area is fused.

### Sewing Machine Preparations

1. Attach the 7/9 Hole Cord Foot to your PFAFF® sewing machine with the cords threaded in the foot.
2. Lead the cords under the presser foot and out the back. Leave the thread tails extending about 1½" at the back.
3. Select a decorative stitch.

### Sewing Instructions

1. Stitch the cord randomly in place all over the fabric. For interest, you can change the order of which you thread the cording into the foot to get different color combinations.
2. Press the piece.
3. Cut into the following strips for use in Class 11:
  - 1(3" x 21")
  - 1(4" x 21")

