


Mystical Whimsy Quilt – Class 3b

Three Hole Yarn Foot for IDT™ System and Circular Attachment

Create beautiful braid embellishments on your project using the Three Hole Yarn Foot, Circular Attachment, PFAFF® decorative stitches and different types of decorative cords or yarn.



Supplies:

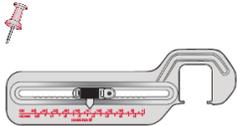
<p>Fabric #5* Faux Suede or Suede</p>		<p>2(10" x 17") Small Circles</p>
<p>Three Hole Yarn Foot for IDT™ System</p>		<p>Part #820920096</p> 
<p>Extension Table</p>		<p>Part number will be dependent on PFAFF® sewing machine model</p>
<p>Circular Attachment</p>		<p>Part #821026096</p> 
<p>PFAFF® Tear-A-Way Stabilizer 20" x 10 yards</p>		<p>Part #821399096 Cut 2(10" x 17")</p>

PFAFF® Topstitch Needle Size 90/14, 5 pack		Part #821196096
Robison-Anton Poly Filament Bobbin Thread		Part #140000905
Robison-Anton 40wt Rayon Thread		Part number based on color
PFAFF® 4"/10.2cm Micro Tip Straight Blade Scissor		Part #821286996
Decorative Cord or Yarn		
Water-soluble Marker		
SINGER® Steam Iron		Part number dependent on iron model.
Rotary Cutter, Mat, 6" x 24" Ruler		
Other Supplies <ul style="list-style-type: none"> • Ironing Surface • Pressing Cloth 		


Sewing Machine Preparations

1. Insert a PFAFF® Topstitch Needle Size 90/14 in your PFAFF® sewing machine.
2. Attach the Extension Table, this will give you a larger sewing surface and better support for your project.
3. Thread with Robison-Anton 40wt Rayon thread on top and Robison-Anton Poly Filament Bobbin thread on the bobbin.

4. Remove the presser foot.
5. Snap on the Circular Attachment by snapping the two hooks (A) on the attachment into the two holes (B) on the stitch plate.


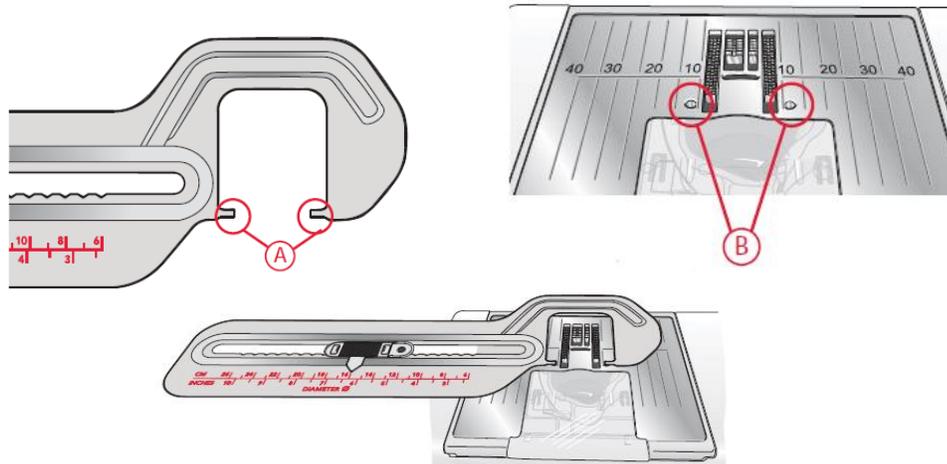


6. Cut equal lengths of decorative cord or yarn.
7. Prior to attaching the foot to the machine. Thread decorative cords or yarn into the holes of the Three Hole Yarn Foot from the top of the foot, use the Yarn Threader included with the foot.
8. Make sure the cords or yarn slides easily through the openings. If the yarn is too thick it will create too much tension and the feeding may be affected. Tip: Tie the cord or yarn together in a knot so they don't slip out of the holes.

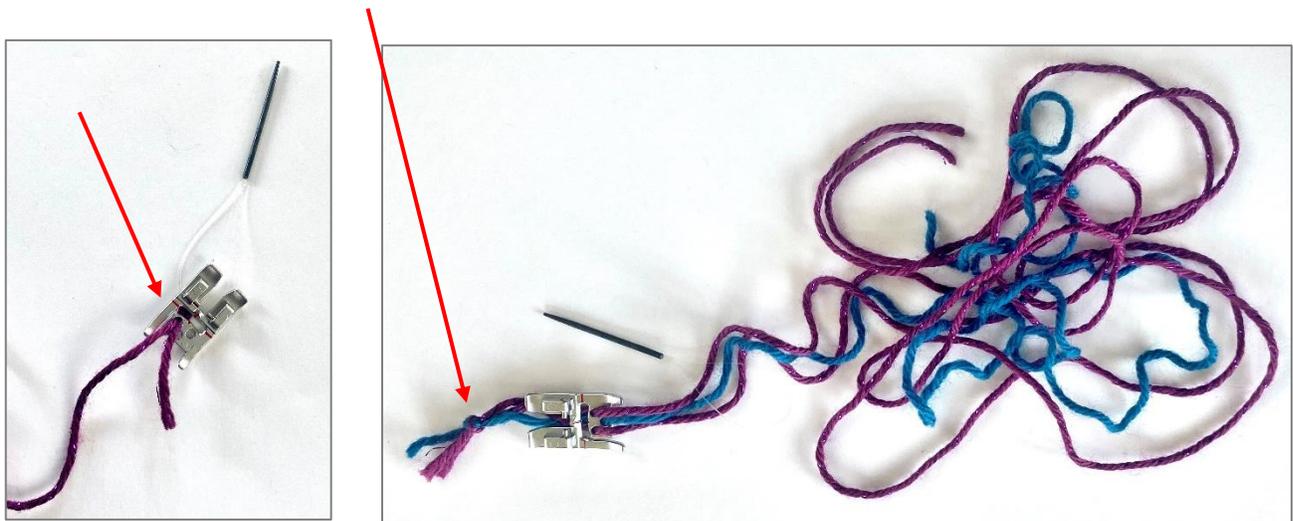

9. Attach the Three Hole Yarn Foot to your PFAFF® sewing machine.
10. Lead the cords or yarn under the presser foot and out the back. Leave the thread tails extending about 1½" at the back.

11. Select a decorative stitch. Note: Decorative stitches that use forward motion work best (avoid stitches with too much backward motion). If you have a sewing machine that has the Optional Feet Stitches, you can use a Three Part Decorative Stitch designed for the Three Hole Yarn Foot.

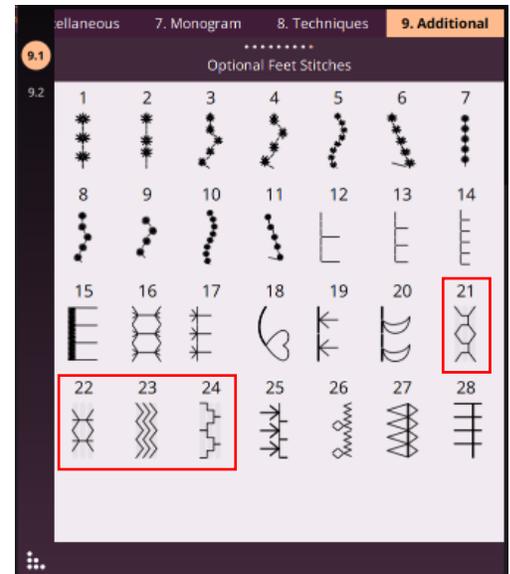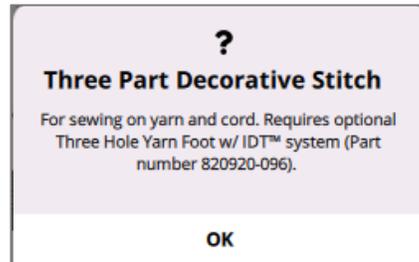


12. Other stitches that can be used are the Three-Step Zigzag Stitch, Elastic Stitch or Triple Stretch Stitch. When using the Zigzag stitches increase the stitch width to 9mm.




Fabric Preparation

1. On the 2(10" x 17") piece of Fabric #5 mark with the water-soluble marker the following lines:
 - a. 1" in from the side
 - b. 8½" up on the 17" length

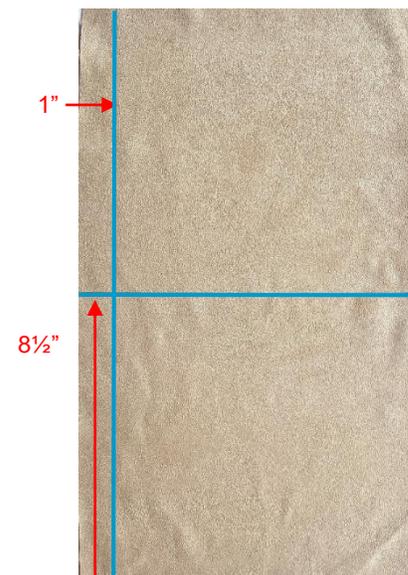

Circular Attachment Sewing Instructions

1. Set the size of the circle on the Circular Attachment by positioning the tip of the SizeGuide above the number that corresponds to the diameter of the circle you wish to stitch. The number on the scale is the diameter of the circle if sewn with a straight stitch, in center position.

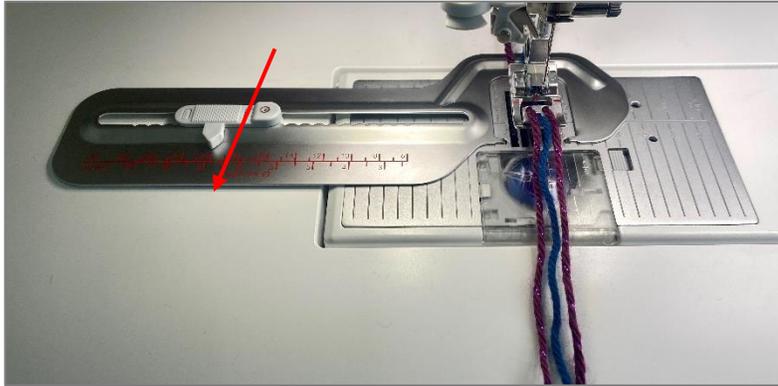

Note: If your machine features an automatic thread cutting function, it is recommended that it is not used when the Circular Attachment is snapped on.

2. Move the SizeGuide to a diameter of 8cm, when moving the SizeGuide, hold the attachment with your right hand and move the guide with your left. Note: Do not move the SizeGuide unit by holding the pivot pin, the pivot pin can bend or break.
3. Place the PFAFF® Tear-A-Way Stabilizer underneath the fabric.
4. Push the pivot pin through the fabric at the marked intersection point.
5. Place the pivot pin in the hole of the SizeGuide (the inside of the SizeGuide is magnetic which assists in placing the pin in the hole).
6. Lower the presser foot and start to sew. Sew carefully, not too fast. If your machine has a speed control reduce the sewing speed to easily guide the fabric and yarn as you sew.
7. Stitch another row by moving the SizeGuide to a diameter of 12cm.
8. Stitch another row by moving the SizeGuide to a diameter of 16cm.
9. Stitch another row by moving the SizeGuide to a diameter of 20cm.
10. Stitch another row by moving the SizeGuide to a diameter of 24cm.



11. Repeat for the second 10" x 17" piece of Fabric #5.
12. Remove the stabilizer from the back of both pieces.
13. Press with a SINGER® Steam Iron on a medium heat setting using a pressing cloth.
14. Trim along the 1" drawn line.



15. Set aside for the two small circles in Class 7.

