
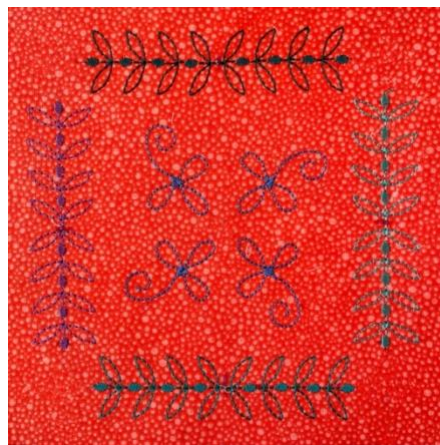


Session #9

By Marie Duncan

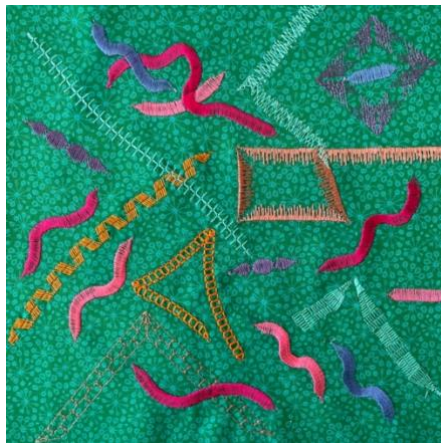


Our blocks today include the Tapering, Single Motif and Omnimotion Stitches

Supplies:

- INSPIRA® Tear Away Light Stabilizer 620112796
- Robison-Anton rayon embroidery thread
- Robison-Anton cotton thread
- Bobbin thread
- Pictogram Pen

Square I- Tapering Stitches Menu Q:

Tapering Stitches are stitches that are designed to taper at the beginning and or the end of the stitch. You have the ability to select the degree, or angle, of the taper, both at the beginning and the end.

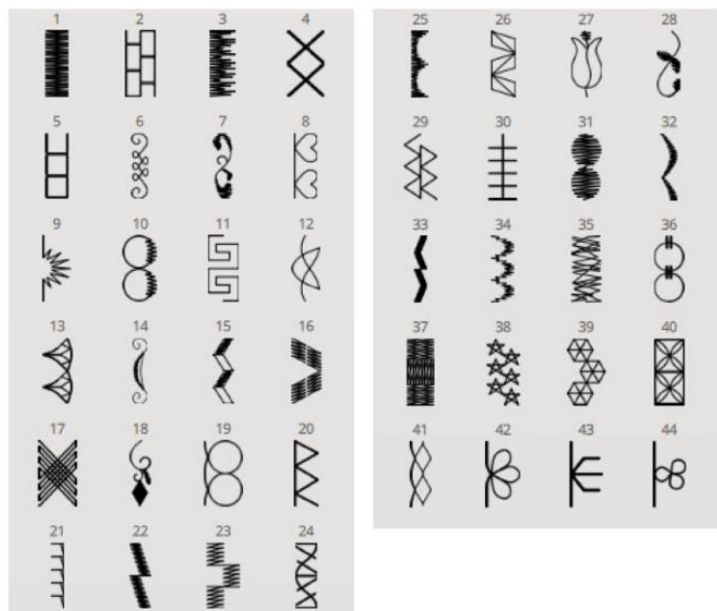

The tapering menu will be visible when a stitch that can be tapered is selected. Touch the tapering menu to select from different angles for beginning and end tapers.



To return to the stitch menu, touch the stitch icon.

The machine will sew the beginning tapered point and then continue with the selected stitch. When the desired length has been sewn, touch the reverse button. The stitch will taper to the end.



You need to touch reverse during the stitch before you want the repeat to stitch out, as shown.

Select taper "off" to remove any tapering at the beginning or end of the stitch. If you select taper "off" on both the beginning and end, the stitch will be a regular stitch without tapering.




Sew:

1. Thread with either Robison-Anton cotton or rayon thread on top and bobbin thread in the bobbin.
2. Snap on your S Foot.
3. Choose your 9" x 9" square and place INSPIRA® Tear Away Light Stabilizer underneath your fabric.
4. Select your stitch, then select the beginning and ending angles.
5. Stitch your first row touching Reverse to activate the final taper.
6. Try different angles, and turn corners. Just play! By the time you have filled your square with stitches, you will be very comfortable with your tapering stitches!



Square 2- K Omnimation and O Single Motif stitches:


Program these Omnimation stitches into an unlimited number of combinations. Stitches are formed with side motion. The stitch width can be up to 54mm.

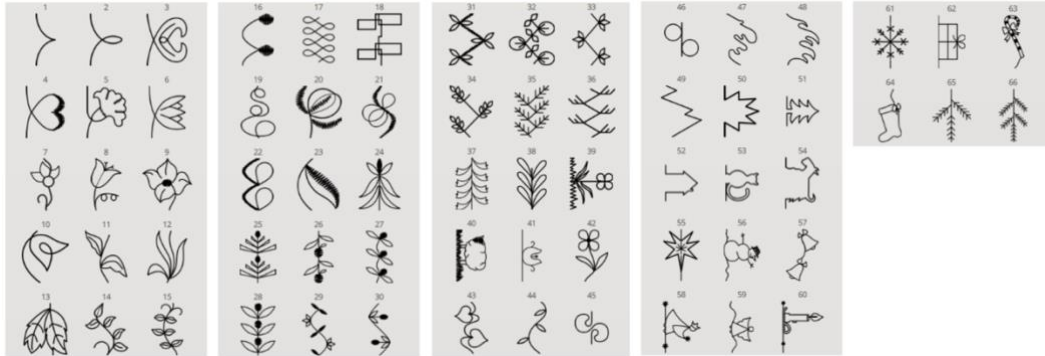


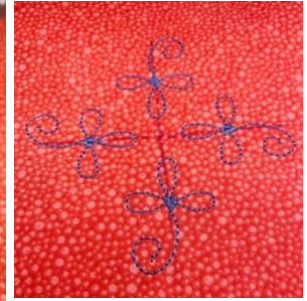
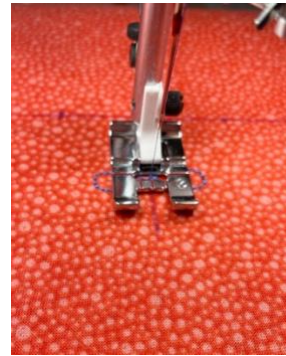
Single Motif stitches are Omnimation stitches that are programmed to stop after one sewn repeat.



1. Choose your 9" x 9" square. Mark it as shown, using your Pictogram Pen.
2. Snap on your S Foot.
3. Place INSPIRA® Tear Away Light Stabilizer underneath your fabric.
4. Activate your Laser. It will help you keep the stitching even. As you are sewing, the stitching will “wander” back and forth and if you keep the laser parallel to the drawn line, it will keep your rows of stitching even.
5. We are going to begin in the center.

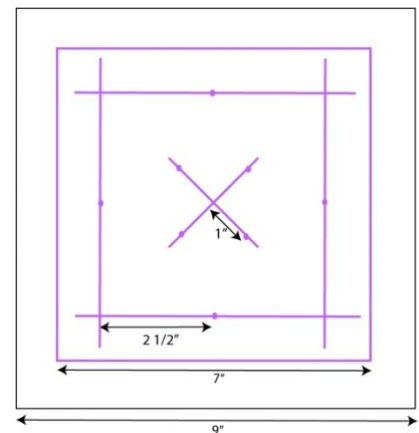

6. Select O .
7. Begin to sew with the back of your foot towards the center as shown.
8. The stitch will complete, then stop and cut the threads.
9. Rotate the fabric and repeat another three times.




10. Touch Program .

11. Touch K28 .

12. Touch K28 .


13. Touch K28 .


14. Touch K28 .

15. Touch .

16. Touch Cut .

17. Touch OK .

18. Touch Mirror End to End .

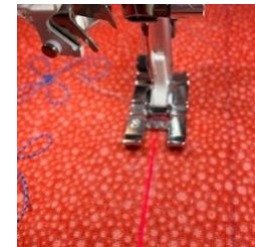

19. You now have four stitches programmed together starting at the bottom of the leaf design.
20. Begin on the dot in the center of the line. Stitch the first repeat.
21. Begin again on the dot going in the other direction and finish the first side.
22. Stitch the other sides beginning again in the center dot.
23. Tear off the excess stabilizer.

