


# Mystical Whimsy Quilt – Class 6

### **Ribbon Stitches**

Add dimensional elements to your decorative stitching with beautiful ribbon stitches. Narrow ribbons are woven into these special stitches as you sew.

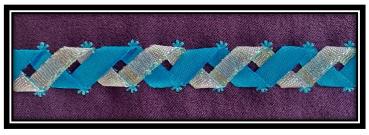

# Supplies:

Fabric #4a & 4B		1(1" x 21") Elango for Pibbon	
		4(1" x 21") Flange for Ribbon Stitches Strip	
Confetti Cloth from Class 1		Succes Sup	
Fabric #8*		1(4" x 42") Strip for Small circle	
Faux Suede		piecing	
2 Different Colors of Ribbon $\frac{1}{8}$ " - $\frac{1}{4}$ " (2 - 6mm) width		For Ribbon Stitches	
ribbons are recommended for single and double ribbon			
stitches			
Perfect ¼" Foot with Guide for IDT <sup>™</sup> System		Part #821063096	
or	And the second s	or	
¼" Right Guide Foot for IDT <sup>™</sup> System	*	Part #820924096	
2A Fancy Stitch Foot	and a second	Part #820774096	
Extension Table		Part number will be dependent on PFAFF <sup>®</sup> sewing machine model	
PFAFF <sup>®</sup> Tear-A-Way		Part #821399096	
Stabilizer 20" x 10 yards		1(4" x 42")	



PFAFF <sup>®</sup> Topstitch Needle Size 90/14, 5 pack	C TANK FUNCTION OF THE PERSON	Part #821196096		
PFAFF <sup>®</sup> Universal Needle Size 80/12, 5 pack		Part #821194096		
Robison-Anton Poly Filament Bobbin Thread	के स स के स स स के स स स के स के स के स	Part #140000905		
Robison-Anton 40wt Rayon Thread	Robison-Anton Textile Co.	Part number based on color		
50wt Cotton Sewing Thread				
PFAFF <sup>®</sup> 4"/10.2cm Micro Tip Straight Blade Scissor		Part #821286996		
Chalk Marker	CLOVER			
SINGER <sup>®</sup> Steam Iron		Part number dependent on iron model.		
Rotary Cutter, Mat, 6" x 24" Ruler				
Other Supplies <ul> <li>Ironing Surface</li> <li>Pressing Cloth</li> </ul>				



# **Ribbon Stitches for Small Circle Piecing** Sewing Machine Preparations

- 1. Insert a PFAFF<sup>®</sup> Topstitch Needle Size 90/14 in your PFAFF<sup>®</sup> sewing machine.
- 2. Attach the Extension Table, this will give you a larger sewing surface and better support for your project.
- 3. Thread with Robison-Anton 40wt Rayon thread on top and Robison-Anton Poly Filament Bobbin thread in the bobbin.
- 4. Attach the 2A Fancy Stitch Foot to your sewing machine.

### **Fabric Preparation**


1. Draw a line down the center of the 4" x 42" strip of Fabric #8 with the chalk marker.




2. Place PFAFF<sup>®</sup> Tear-A-Way Stabilizer under the fabric.


#### **Sewing Instructions**

- 1. On the *creative icon*<sup>™</sup> 2 open the **Help Center**.
- 2. In the Help Center, select Techniques and Tutorials.

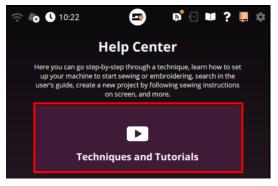

3. Select Sewing Techniques and Exclusive Stitch Techniques.

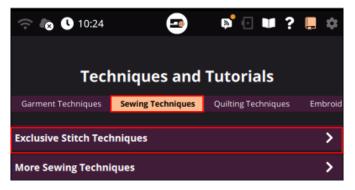

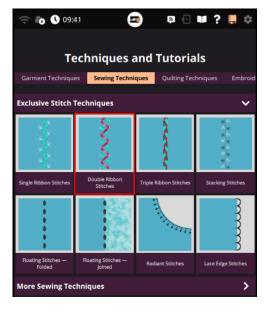







#### 4. Select Double Ribbon Stitches.

5. Follow the tutorial and watch the videos for stitching the **Double Ribbon Stitches**.

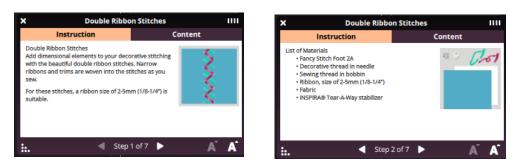

6. You can select your **Double Ribbon Stitch**, by selecting it through the **Content** menu in the tutorial, or select **Techniques** through the **Load Stitch** menu.

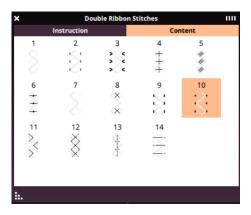



🔶 🕼 🕓 09:49	•	P (	• ?	. •
Recommendations v				
Information ¥ 1 E2.10				
Active Features >				
				4
				*
				٧
Image: Constraint of the	12	At	<b>₽</b> Kan	0

- Start to sew using the Start/Stop button. The machine will complete the first part of the stitch and stop automatically with the needle down. Place the ribbon under the foot in front of the needle, at the same angle as the stitching.
- 8. Touch the **Start/Stop** button and continue to sew until the machine stops.
- 9. Add a second ribbon, placing it in front of the needle, crossing the first ribbon and at the same angle as the travel stitches.
- 10. Continue to sew until the machine stops.
- 11. Fold the second ribbon over itself quite firmly and position it directly in front of the needle at the same angle as the travel stitches.
- 12. Continue stitching until machine stops. Both ribbons are now on the same side.








- 13. Fold the first ribbon over and pull it in front of the needle crossing the second ribbon.
- 14. Sew until the machine stops.

- 15. Fold the first ribbon again and position it in front of the needle.
- 16. Continue to sew.
- 17. When the machine stops both ribbons will be on the same side again.
- 18. Continue to sew until you reach the end of the strip. Tip: You should never have two ribbons on the right hand side of the foot.



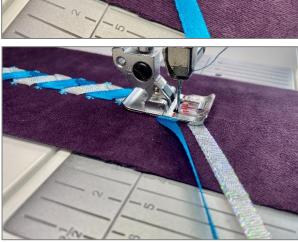

- 19. Gently remove the stabilizer.
- 20. Press the strip using a SINGER® Steam Iron and a pressing cloth.
- 21. Cut the strip into 2(3" x 21") pieces for Class 7.

#### **Sewing Machine Preparations**

- 1. Insert a PFAFF<sup>®</sup> Universal Needle Size 80/12 in your PFAFF<sup>®</sup> sewing machine.
- 2. Thread with 50wt Cotton sewing thread on top and on the bobbin.
- 3. Attach the Perfect ¼" Foot with Guide for IDT<sup>™</sup> System or the ¼" Right Guide Foot for IDT<sup>™</sup> System to your sewing machine. Engage the IDT<sup>™</sup>.

## **Fabric Preparation**

1. Press the 4(1" x 21") Confetti Cloth strips in half right sides together.





### Sewing Instructions for Flange for Ribbon Stitches

1. Sew the Confetti Cloth flange pieces onto both sides of the Ribbon Stitch strips using a ¼" seam allowance. Allow the guide on the foot help to hold the pieces even.





2. Press the seam allowance from the flange pieces towards the ribbon stitch strip.

